

Fault code 3

Supply voltage

Diagnostic conditions

- Ignition on

Possible cause of fault

- ◆ Low battery positive voltage

Affected terminals

Terminal 5

Diagnosis/troubleshooting

Work instruction		Display OK	If not OK
1	Check the battery or alternator.	⇒ Step 2	Charge or replace battery. Repair alternator → End
2	Check the ground points and the plug connection on the airbag triggering unit for corrosion	→ End	

 **Note!**

The warning light is on as long as the limit value is exceeded or not reached.