



Porsche PCM 4.0 CarPlay Integration Interface kit Installation Guide

Dipswitch Settings

1-7 OFF 8-ON

In addition to the above, Dip Switch 8
OFF if adding an aftermarket reverse camera.

Dip switch setting 4 On if adding a reverse camera to a MANUAL transmission.

Dip switch setting 8 ON default if no aftermarket camera in use or using the factory fitted reverse camera.

Please note whenever you make a dipswitch change you must press the reset button on the back of the carplay box to apply the changes.


Installation –

Please note installation is performed at your own risk – this guide is for reference only. If you are unsure of your ability to install this equipment, please consult an automotive professional.


Installation steps overview –

- 1) Remove air vents/trim to expose screws holding in PCM unit (removal varies by car type)
- 2) Connect wiring and position CarPlay box in aperture behind radio unit (or above glovebox if desired)
- 3) Install microphone
- 4) Run CarPlay USB cable to desired location. Refit radio unit and trim.

View of original PCM radio once removed and necessary connectors

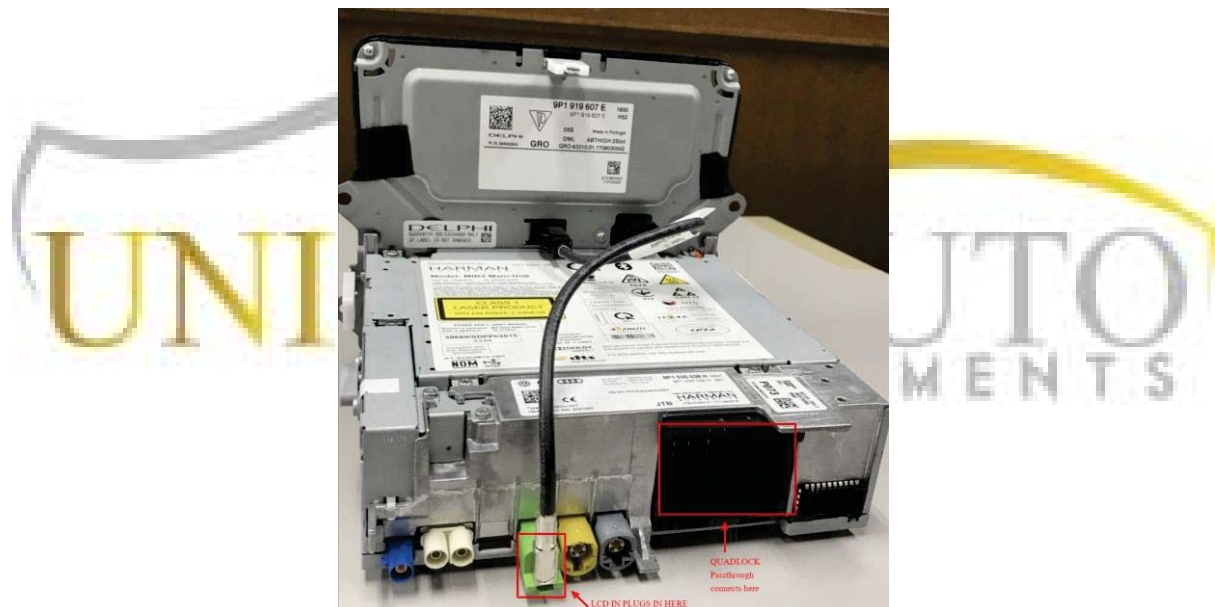


Wiring Diagram –

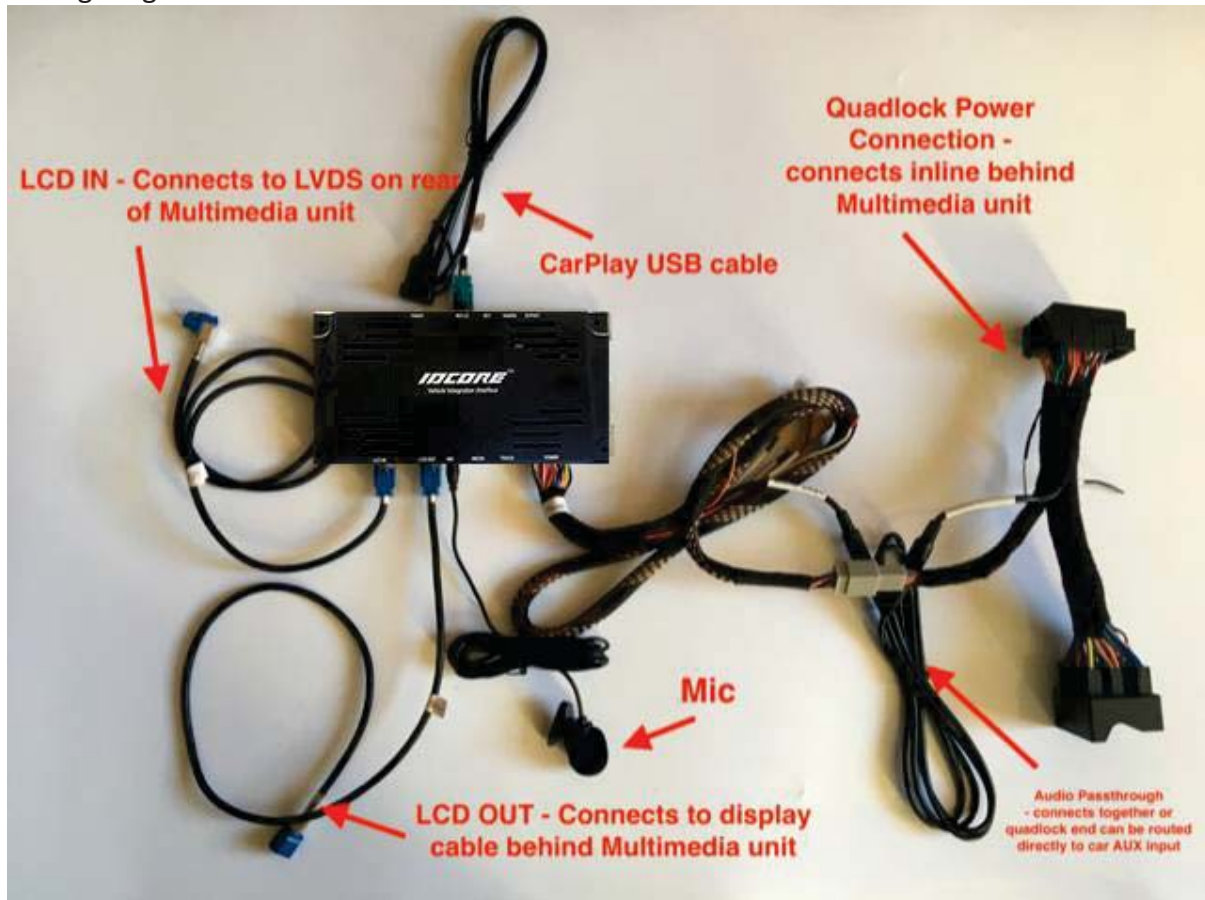

Refitting –



Position CarPlay interface box in aperture behind PCM unit as shown

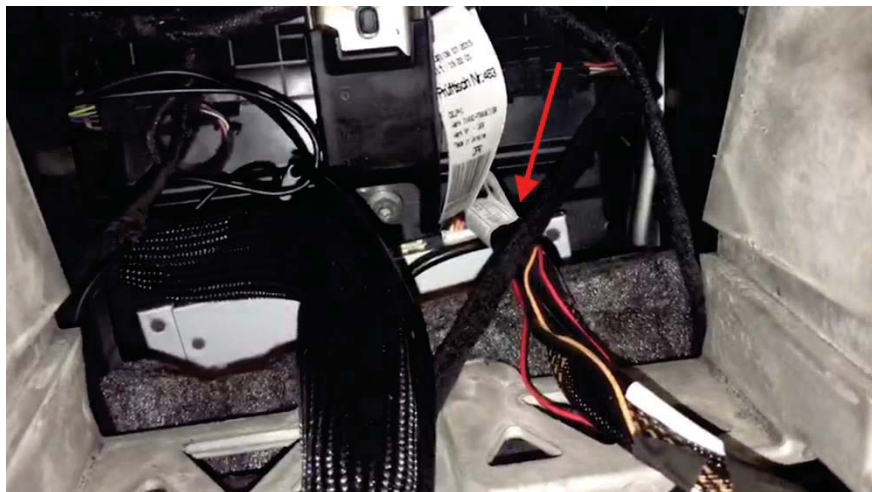

3.5 mm AUX terminator- must be fitted to cars original AUX port (if equipped)

Once refitted –

To switch into and out of CarPlay display, long press 'NAVI' button on PCM unit.

